

FAUX WOOD BLINDS



OPERATION & MAINTENANCE

TO TILT

Twist the wand.

TO RAISE


First, tilt blinds to the fully open position. Then to raise the blind, use both hands on each side of the bottom rail to gently lift it up.

TO LOWER

First, tilt blinds to the fully open position. Then to lower the blind, use both hands on each side of the bottom rail to gently pull it down.

TROUBLESHOOTING

If the blinds are moved to an uneven position or don't sit flat on the window sill, use both hands on the each side of the bottom rail to slowly raise and lower blinds until they level out.

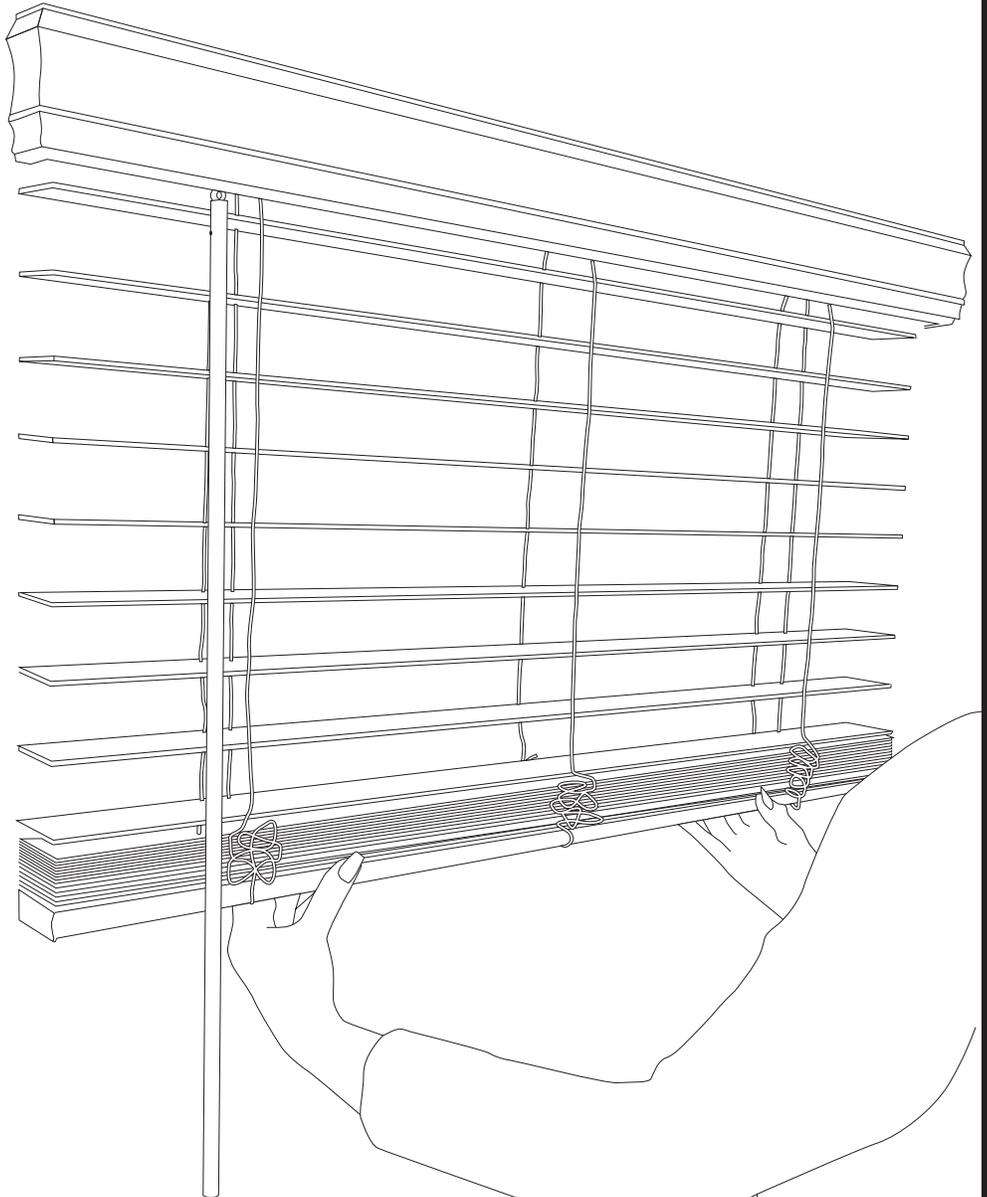

CLEANING

*All of our products are designed to require minimal care and maintenance, but we do recommend that you dust regularly with a soft cloth or feather duster. This will maintain a like-new appearance. For some of the vinyl fabrics or vertical vanes, you can wipe off any dirt or stains with a damp cloth when necessary. You may also use compressed air from a can or the brush attachment from your household vacuum to dust off selected products. **We do not recommend the use of any detergents as this may damage the product.***

VERTICAL BLINDS

OPERATION & MAINTENANCE




TO OPEN

Rotate the slats by turning the wand until the slats are in the open position prior to sliding the blinds open with the wand.

CLEANING

*All of our products are designed to require minimal care and maintenance, but we do recommend that you dust regularly with a soft cloth or feather duster. This will maintain a like-new appearance. For some of the vinyl fabrics or vertical vanes, you can wipe off any dirt or stains with a damp cloth when necessary. You may also use compressed air from a can or the brush attachment from your household vacuum to dust off selected products. **We do not recommend the use of any detergents as this may damage the product.***

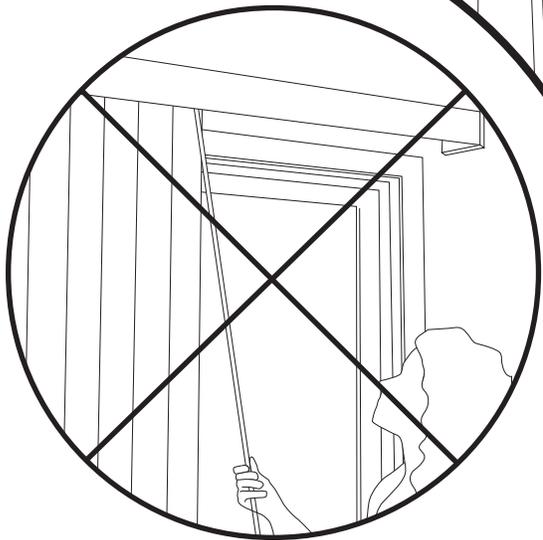

DO NOT

Do not try to slide the verticals open while the slats are in the closed position.